

LR-804J02/LR-804J03

Media DVR

Quick Guide



LR-804J02




LR-804J03



1. Main Unit




2. Power Cable

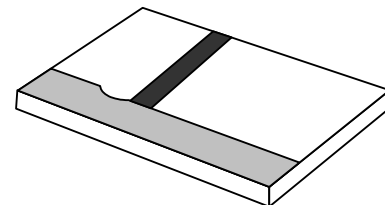

4. Quick Guide



3. Power Adapter

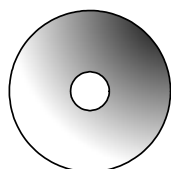

5. Software CD



6. Mouse



7 Remote Controller



8. Screws (X 4)



9. Audio Cable




10. BNC Adapter


No.	Package Contents	Description
1	DVR Main Unit	Stand-alone Digital Video Recorder with Media Player
2	Power Cable	AC Power Supply to Adapter for DC 12V Power
3	Power Adapter	DC 12V Power Supply
4	Quick Guide (Manual)	Instructs users how to operate the Media DVR.
5	Software CD	Contains: (1) manuals (English/Chinese) (2) quick guide (English/Chinese) (3) software tools (4) README.
6	Mouse	Controls all functions of the Media DVR.
7	Remote Controller	IR Remote Controller for Media Player (for LR-804J02 only).
8	Screws (X4)	Fix an HDD to the HDD drawer.
9	Audio Cable	Connects left and speakers. (for LR-804J02 only).
10	BNC Adapter	BNC - to - RCA Video Adapter (for LR-804J02 only).

2. Outlook

2-1. Front

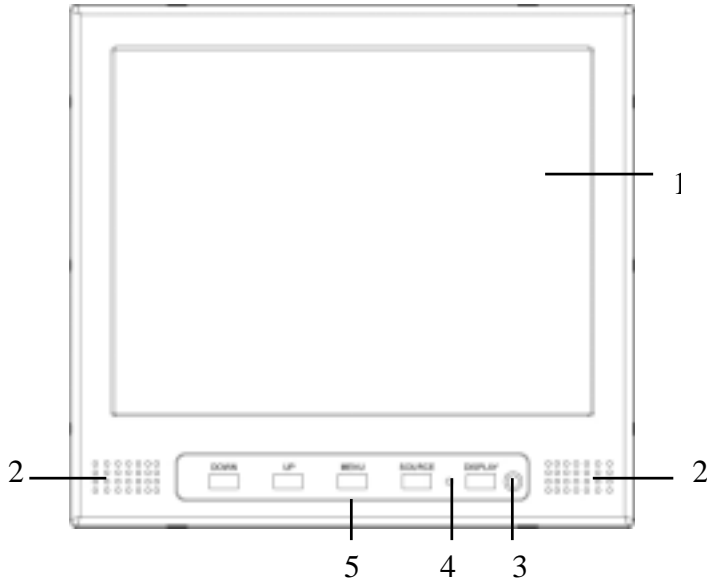


2-2. Side (for LR-804J02 only.)

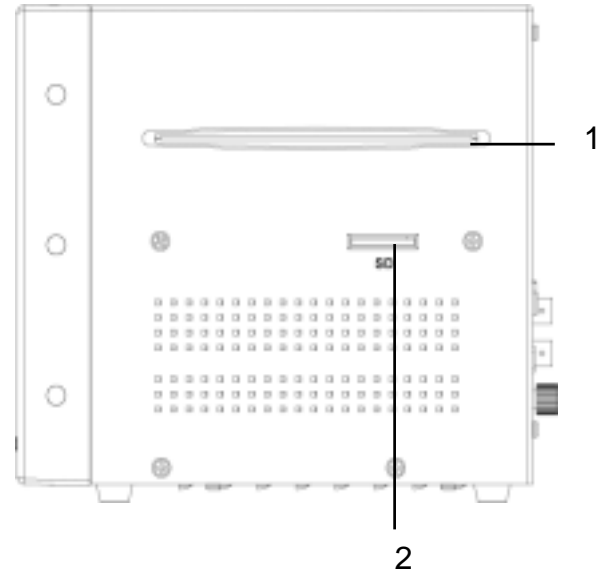

Items	Function
1. 8" LCD Display	Displays images.
2. Speakers	Gives sounds.
3. Receiver (IR Port)	Receives IR signals out of the remote controller.
4. Power LED	Gives red light when the power is on.
5. Control Buttons	Control the OSD menu of the LCD.
<input type="checkbox"/> <i>DISPLAY</i>	LCD Power Switch (On / Off)
<input type="checkbox"/> <i>SOURCE</i>	Video Source Switch (DVR / MEDIA)
<input type="checkbox"/> <i>MENU</i>	Open OSD menu for LCD adjustment.
<input type="checkbox"/> <i>UP</i>	Move up. / Increase values or volume.
<input type="checkbox"/> <i>DOWN</i>	Move down. / Decrease values or volume.

Item	Description
1. DVD Drive	For Media Player Only
2. SD Slot	For Media Player Only


2-3. Rear

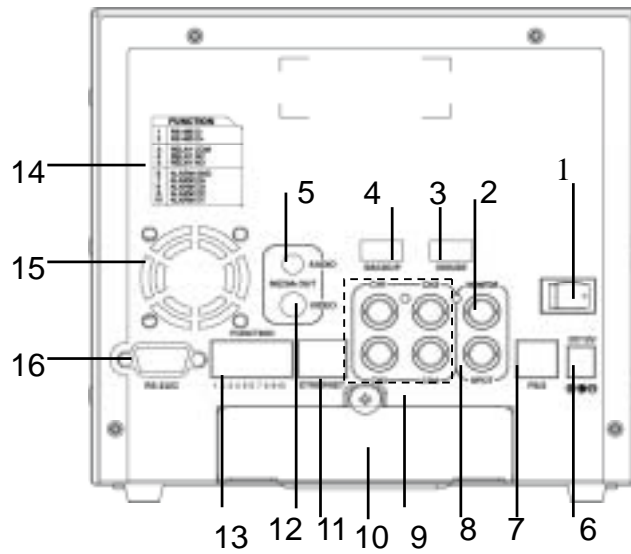

No.	Items	Function	
1	Power Switch	Media DVR Power Switch (On/Off)	
2	MONITOR	Connects a monitor (NTSC / PAL).	
3	MOUSE	Connects a USB mouse.	
4	BACKUP	(1) For Backup of DVR Video Images (2) For DVR Firmware Upgrade	
5	MEDIA AUDIO OUT	Connects a monitor for the Media Player. (for LR-804J02 only.)	
6	DC 12 V	Connects a DC 12 V / 5A power supply. (for LR-804J02 only.)	
7	PS/2	Connects a PS/2 mouse.	
8	SPOT	Connects a SPOT monitor.	
9	CH 1~4	Connect cameras.	
10	HDD Drawer	For HDD Combination ((1) The jumper must be master. (2)The HDD is expandable to 500 GB.)	
11	ETHERNET	Connects the Ethernet.	
12	MEDIA VIDEO OUT	Connects a monitor for the Media Player.	
13	FUNCTION	Function Port for External Devices	
14	Function Port Note	1~2	For External Devices (eg. Speed Domes)
		3~5	For Sirens (Relay Output)
		6~10	For Inputs of 4 Alarms
15	Fan	Moderates the Media DVR's temperature.	
16	RS-232C	Allows engineers to debug the DVR's firmware.	

3. Installation


3-1. Installation Configuration

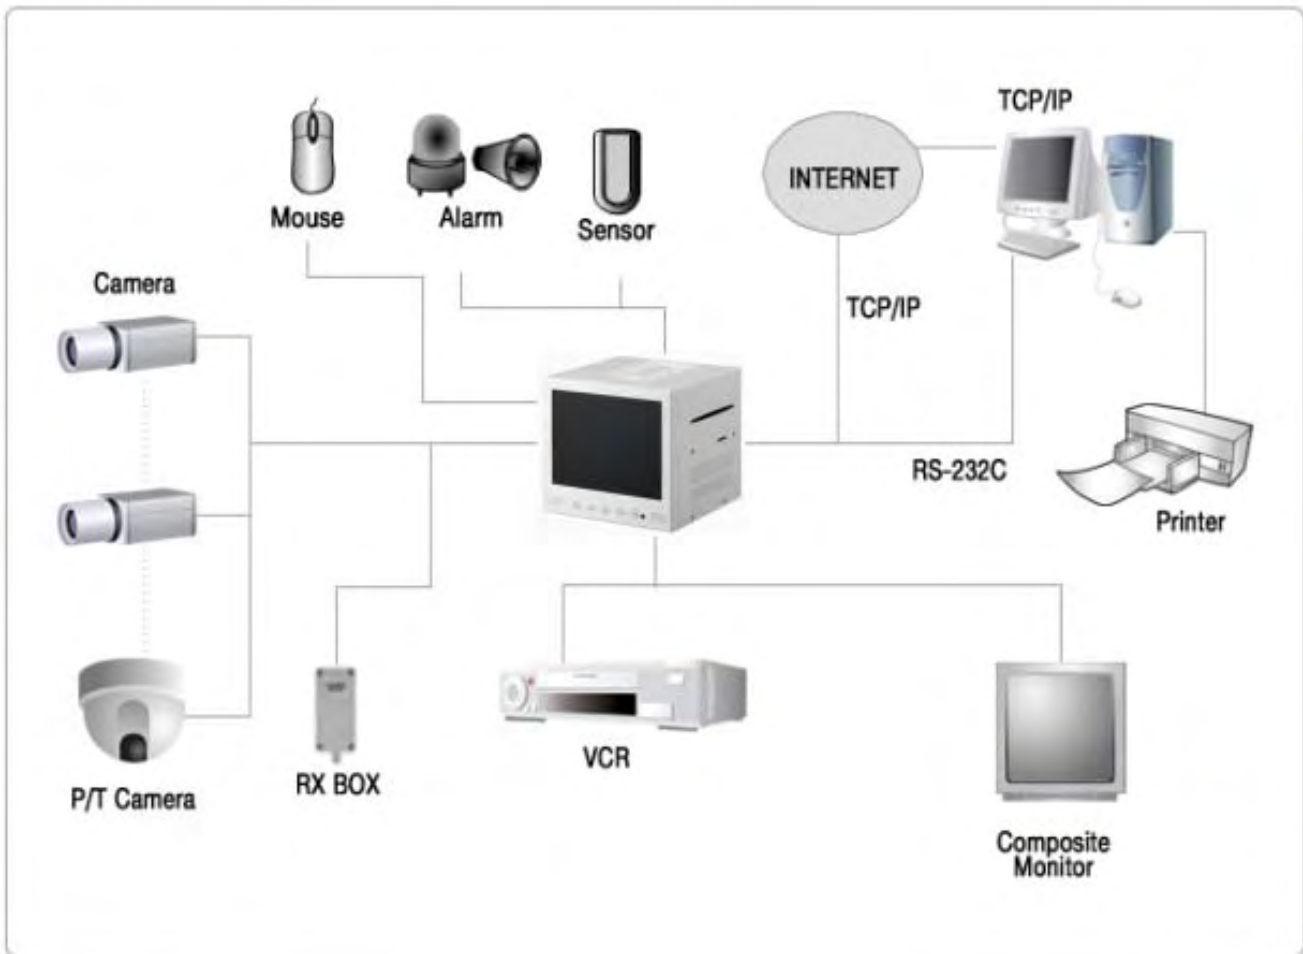

3-2. Camera Connection


Procedure:

- Connect the BNC video cable and the power cable to the camera.
- Connect the the DVR with the other end of the BNC video cable, the DVR power supply, and the mouse.
- Turn on DVR power and adjust camera lens viewing angle.

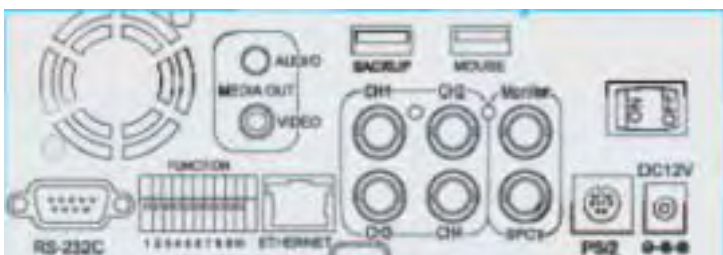


Media out (Audio/Video) is for LR-804J02 only

4-1. Live Playing/ Recording Mode

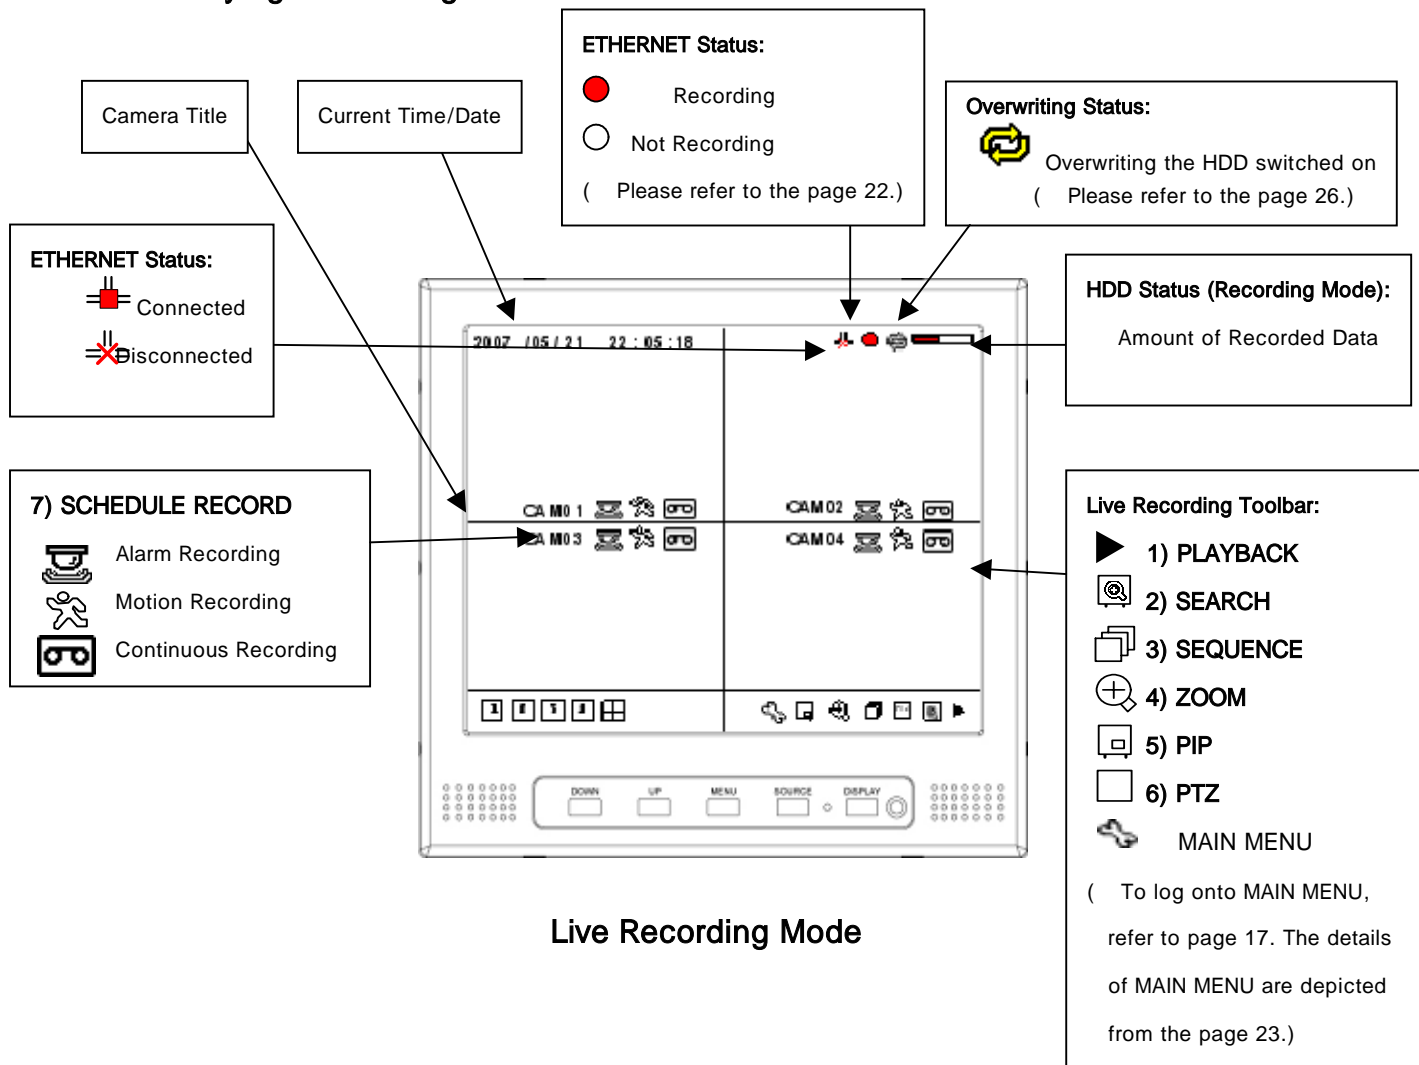

4-2. Live Playing/ Recording Mode PLAYBACK


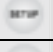 


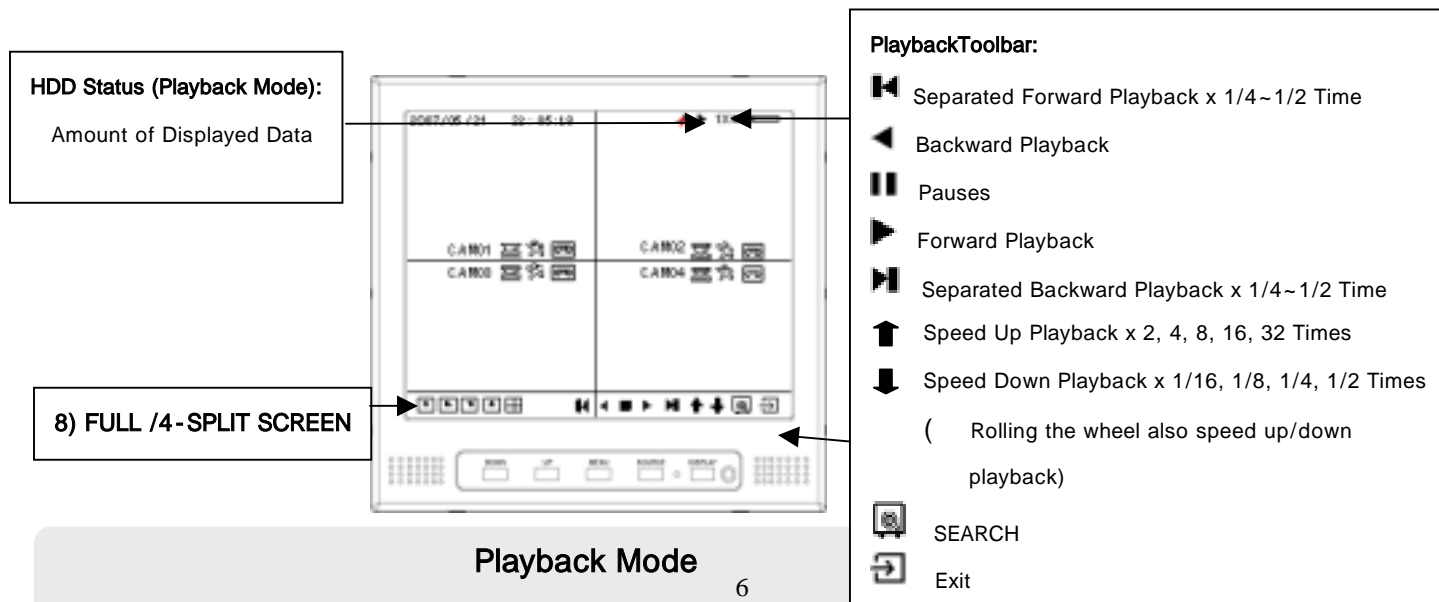
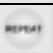 















     
Click to enter the playback mode shown as below.

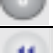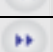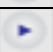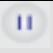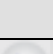

Media Player (This chapter is for LR-804J02 only)

5-1. Remote Controller

Function Overview of Buttons

BUTTON	DESCRIPITON	
	Power	Power on/off the Media Player.
	Setup	Display the setup menu.
	Menu	Display the root menu of the disc.
	Eject	Eject/Draw in the disc.
	Audio	Select the audio language.
	Subtitle	Select the subtitle language or turn it on/off.
	Repeat	Select the repeat type for media playing.
	Display	Display information about the disc.
	Slow	Play at 1/2, 1/3, 1/4, 1/5, 1/6 or 1/7 time normal speed.
	0-9, 10+	Input numbers.
	Rewind	Scan backward at 2, 4, 8 or 16 times normal speed.
	Fast Forward	Scan forward at 2, 4, 8, or 16 times normal speed.
	Play	Play media files
	Pause	(Once) Go into the pause mode. (2 or more times) Go into the setup mode.
	Previous	Go back to the preceding track or scene during playback.
	Next	Go to the next chapter, track or scene during playback.
	Stop	(Once) Pause at the present playing point. (2 or more times) Stop playing.
	Up	Move up (for navigating the setup menu).
	Down	Move down (for navigating the setup menu).
	Left	Move left (for navigating the setup menu).
	Right	Move right (for navigating the setup menu).
	Enter	Execute the selected item or setting.

